

SMART zero

Receiver Advanced Settings

Stay compliant 



Contents

1	INTRODUCTION	3
1.1	TOPICS COVERED.....	3
1.2	WHAT YOU WILL REQUIRE.....	3
2	NETWORK CONFIGURATION.....	4
2.1	CONFIGURE A STATIC IP ADDRESS ON A WIRED NETWORK.....	4
2.1.1	<i>Connecting the Receiver to your network</i>	<i>4</i>
2.1.2	<i>Connecting the power cable to the Receiver.....</i>	<i>4</i>
2.1.3	<i>Powering on the Receiver</i>	<i>5</i>
2.1.4	<i>Connecting to the Receiver.....</i>	<i>5</i>
2.1.5	<i>Logging into the Receiver.....</i>	<i>6</i>
2.1.6	<i>Network settings</i>	<i>6</i>
2.1.7	<i>Apply Network settings</i>	<i>7</i>
2.2	CONFIGURE A STATIC IP ADDRESS ON A WIRELESS NETWORK	8
2.2.1	<i>Connecting the power cable to the Receiver.....</i>	<i>8</i>
2.2.2	<i>Powering on the Receiver</i>	<i>8</i>
2.2.3	<i>Connecting to the Receiver.....</i>	<i>9</i>
2.2.4	<i>Logging into the Receiver.....</i>	<i>9</i>
2.2.5	<i>Select Wi-Fi network.....</i>	<i>10</i>
2.2.6	<i>Network Settings</i>	<i>10</i>
2.2.7	<i>Apply Network settings</i>	<i>11</i>

1 Introduction

Thank you for purchasing SMARTzero, this document will guide you on how to apply advanced settings to the receiver.

1.1 Topics Covered

The following topics will be covered in this guide

1. Network Configuration
 - a. Configure a static IP address on a wired network.
 - b. Configure a static IP address on a wireless network.

1.2 What you will require

To complete any of the topics, you will require the following.

1. A smart device such as a PC, tablet or mobile phone.


2 Network Configuration

2.1 Configure a static IP address on a wired network

Please follow the following steps to configure a static IP address for a wired network.


2.1.1 Connecting the Receiver to your network

Connect the supplied Network cable from your broadband router to the network port on the **Receiver**.

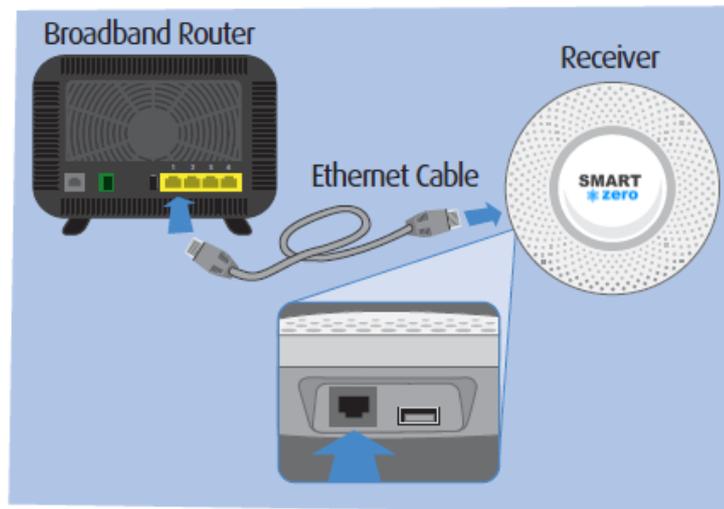


2.1.2 Connecting the power cable to the Receiver

Connect the **Receiver** to a power outlet using the USB cable & plug.

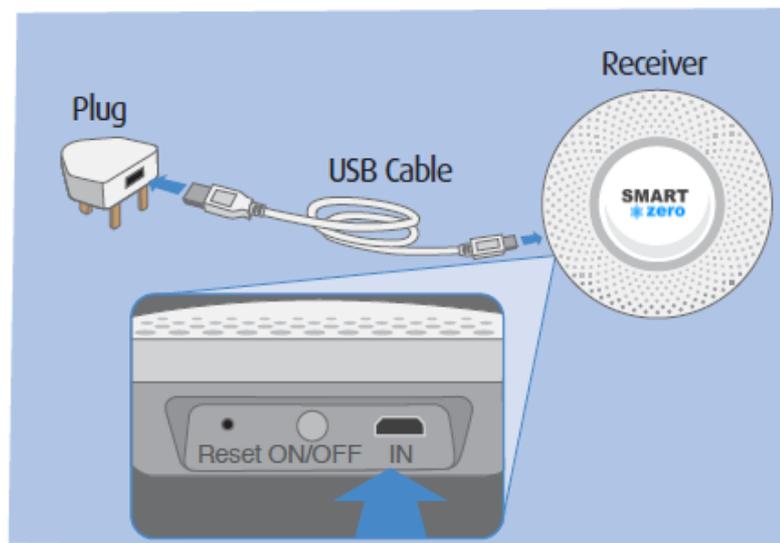

2.1.3 Powering on the Receiver

Push down the power button on the **Receiver**. After a minute, the receiver will be online with your network providing the receiver an IP Address.

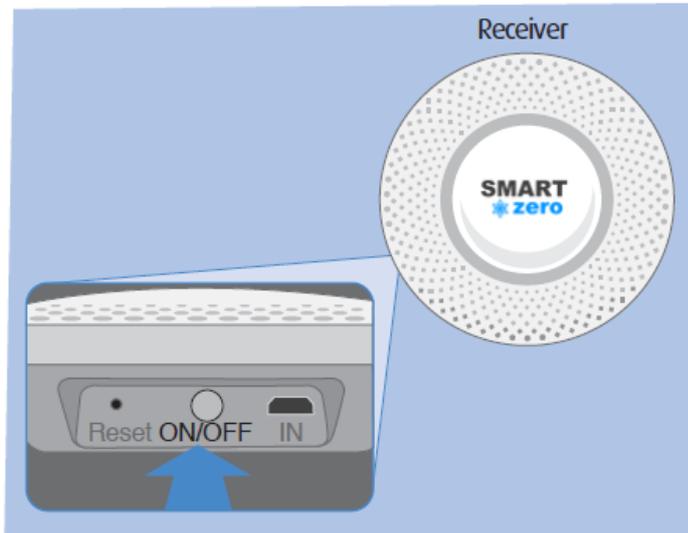


2.1.4 Connecting to the Receiver

On your smart device, display all available Wi-Fi networks and connect to the **Receiver**. The serial number can be found on the rear of the **Receiver**.




2.1.5 Logging into the Receiver

Open a web browser and enter **192.168.99.1** into the address bar. To login, enter the default username: **“admin”** and password **“SMARTzero”**.

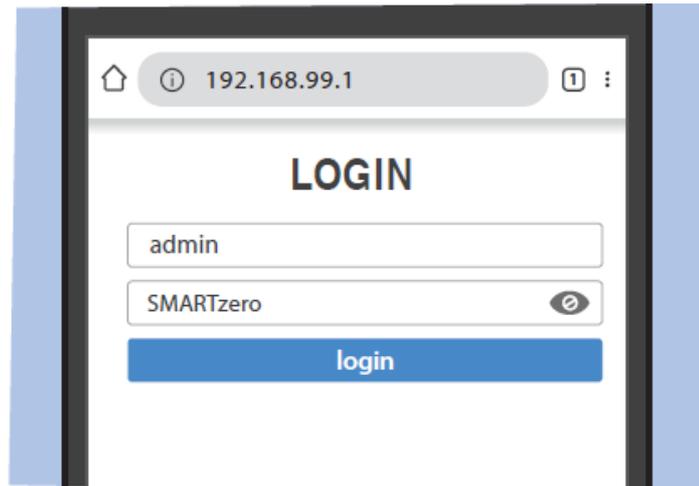


2.1.6 Network settings

Navigate to the **“Network”** tab and enable the **“Ethernet”** switch. Then change the **“Mode”** dropdown field from **“DHCP”** to **“Static”**. This will provide some additional fields where you can set a static IP address and DNS settings for the Receiver.

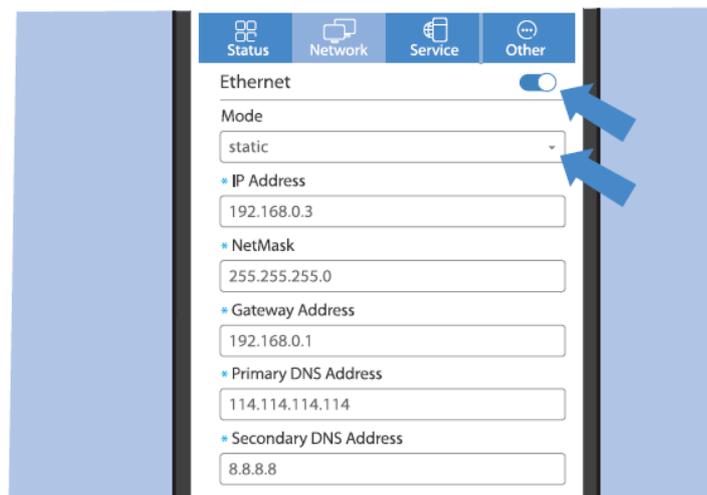

2.1.7 Apply Network settings

To apply the changes, click **“Apply”** and **“Apply** in the pop out window to reboot the **Receiver** and reload the new network settings.

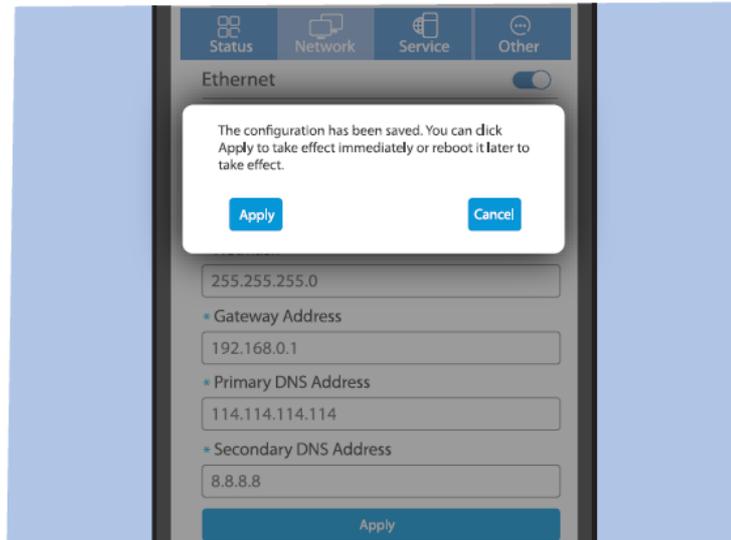


2.2 Configure a static IP address on a wireless network

Please follow the following steps to configure a static IP address for a wireless network.


2.2.1 Connecting the power cable to the Receiver

Connect the **Receiver** to a power outlet using the USB cable & plug.

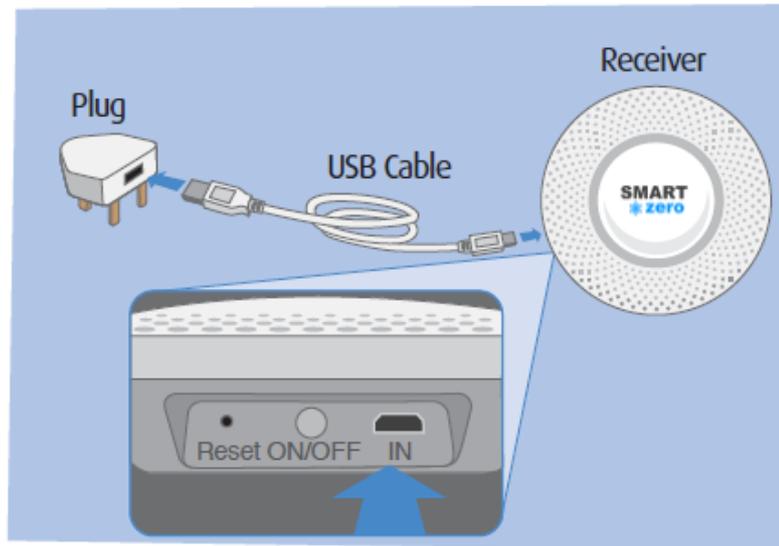

2.2.2 Powering on the Receiver

Push down the power button on the **Receiver**. After a minute, the receiver will be powered up.

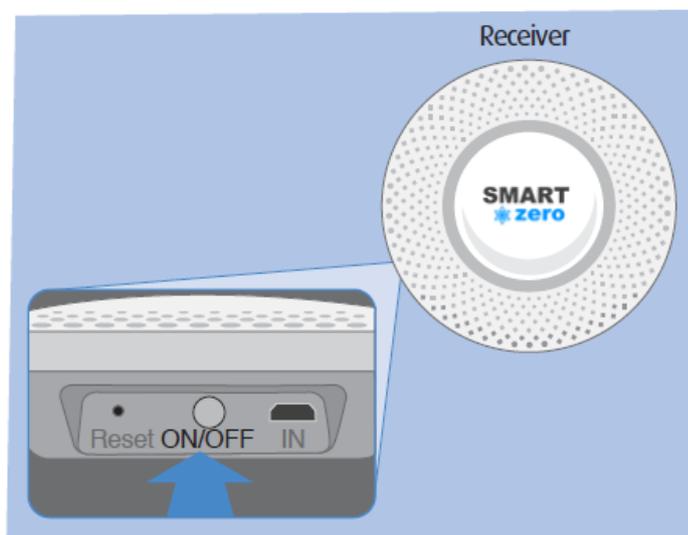


2.2.3 Connecting to the Receiver

On your smart device, display all available Wi-Fi networks and connect to the Receiver. The serial number can be found on the rear of the Receiver.




2.2.4 Logging into the Receiver

Open a web browser and enter 192.168.99.1 into the address bar. To login, enter the default username: “admin” and password “SMARTzero”.

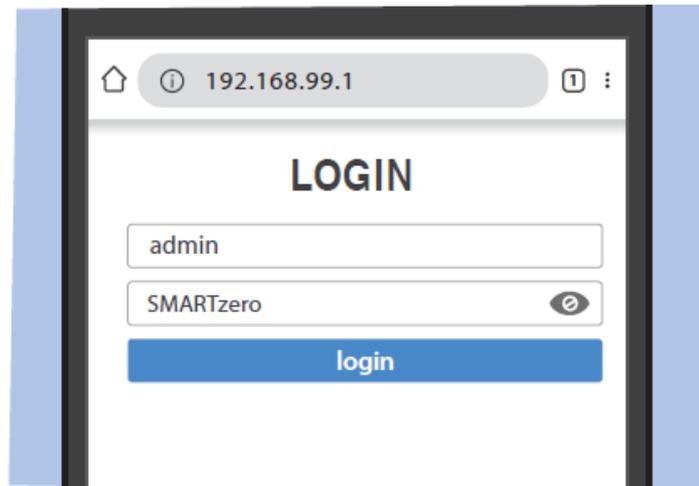


2.2.5 Select Wi-Fi network

Firstly, navigate to the “**Network**” tab and enable the “**Wireless**” switch. Secondly, select your Wi-Fi network from the “**Available Access Point**” dropdown field. Finally, enter the password of the wireless network into the “**Key**” field.

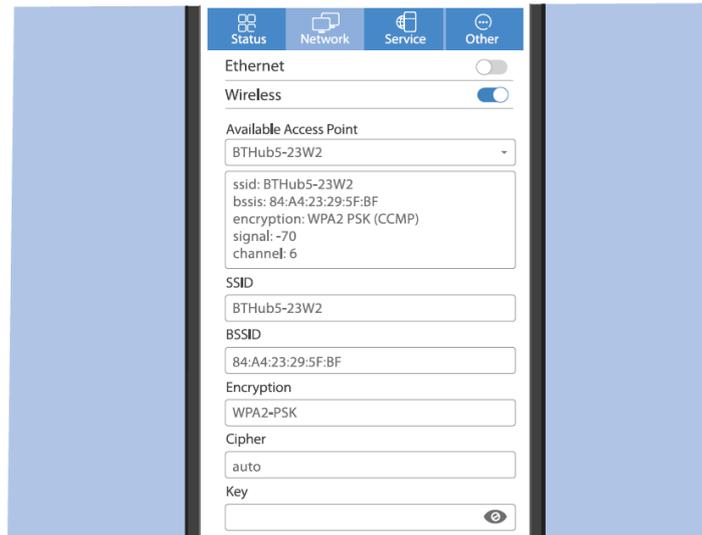

2.2.6 Network Settings

To apply a static IP, change the “**Mode**” dropdown field from “**DHCP**” to “**Static**”. This will provide some additional fields where you can set a static IP address and DNS settings for the **Receiver**.

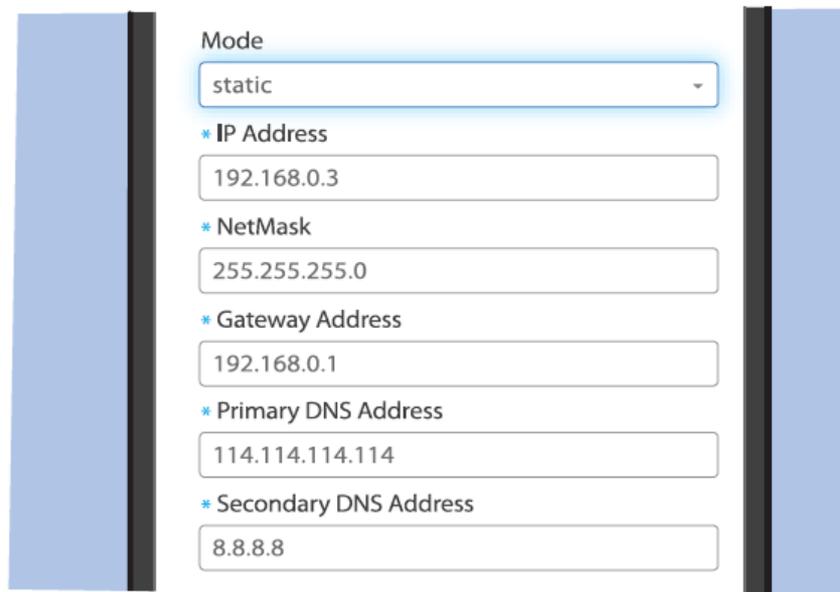

2.2.7 Apply Network settings

To apply the changes, click **“Apply”** and **“Apply** in the pop out window to reboot the **Receiver** and reload the new network settings.

